


IWAKI  
MAGNETIC  
DRIVE  
PUMPS

**MDM**

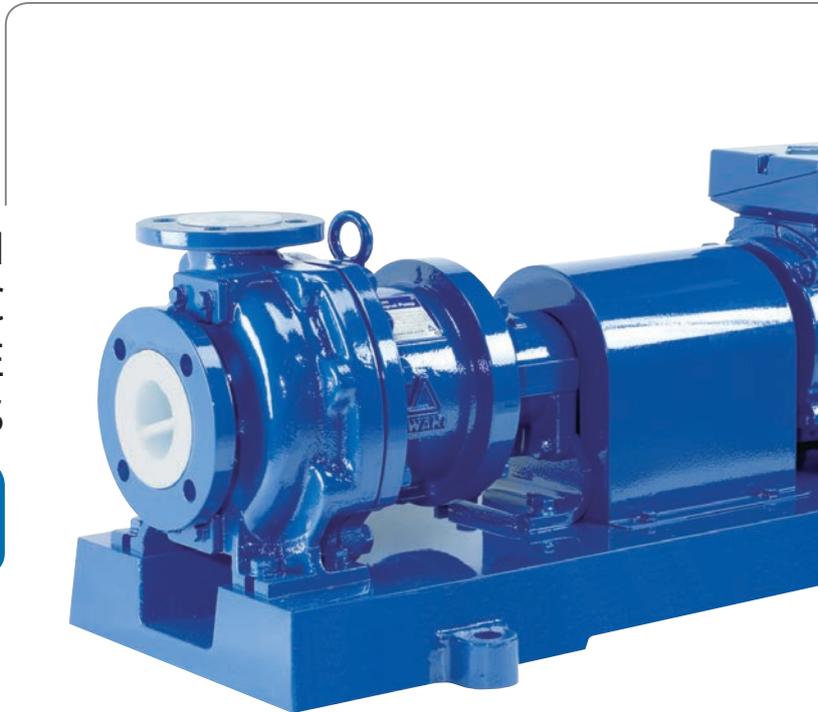


# Magnetic drive process pump resistant to abnormal condition

The MDM Series of Magnetic drive process pumps have wetted parts made of fluororesin. Natural PFA and being standard materials of construction. The MDM features a unique mechanism which gives a greatly improved performance against abnormal condition (Non contact system). Applications cover a wide range of chemical process duties from acid to alkali together with high purity chemicals for the semiconductor industry.

## Unique design prevents abnormal running

(Non contact system) (PAT.)

The pump design features a mechanism to withstand abnormal condition. High magnet power of the rare earth magnets prevents the magnet capsule coming into contact with the thrust ring of the rear casing, thus preventing melting of fluororesin components due to heat generation. This greatly improves resistance against abnormal condition in comparison with conventional magnetic drive pumps made of fluororesin.

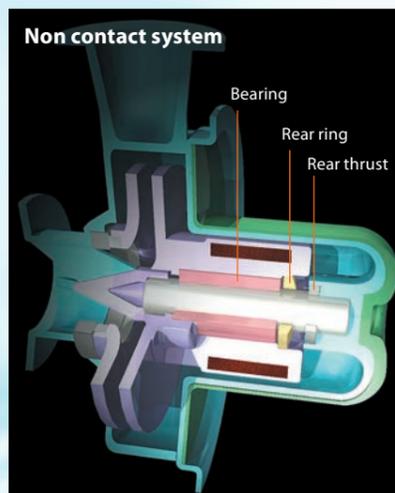

## PFA available in standard models


PFA linings can be supplied to meet many varying duties. PFA being a natural unfilled material generates fewer contaminants and makes it ideally suited for transfer of high purity chemicals.

## Highly durable structure

A ductile cast iron shell adds strength and durability to the outer peripheral surfaces of the fluororesin pump module. The rear casing which is placed under the highest stress is protected by a rear casing cover made from fibre reinforced plastic. This gives sufficient strength and eliminates the eddy current loss caused by the rotating magnetic field. Should it come into contact with the drive magnet unit, no spark would be generated and a high level of safety would be maintained.

## Back pullout system


In order to facilitate inspection and maintenance, this series employs the back pullout system. This enables one to conduct inspections internally and replace parts without removing piping. The pump is designed to include safety measures that can prevent the liquid from leaking when the foot support (bracket) is pulled back.

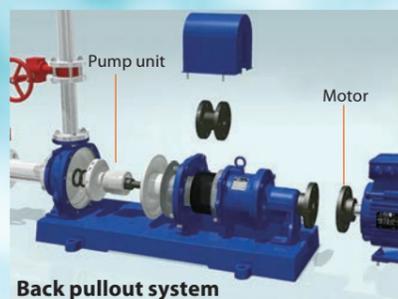


## Compliance with ISO standards (ISO2858/DIN EN22858)

The pump with a common base comply with ISO Standards in regard to piping connection.

Note 1: For compatibility in size with other series of our magnet pumps, please call us.  
 Note 2: ANSI and JIS standards are also available.  
 For details, please call us.

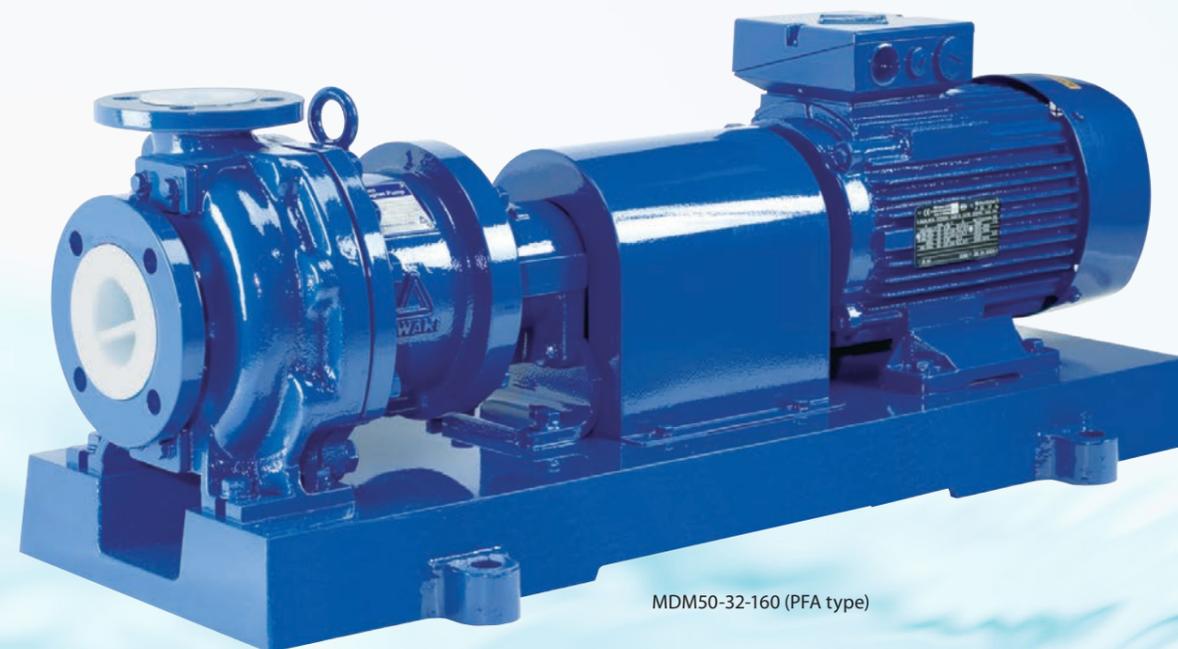

## Construction

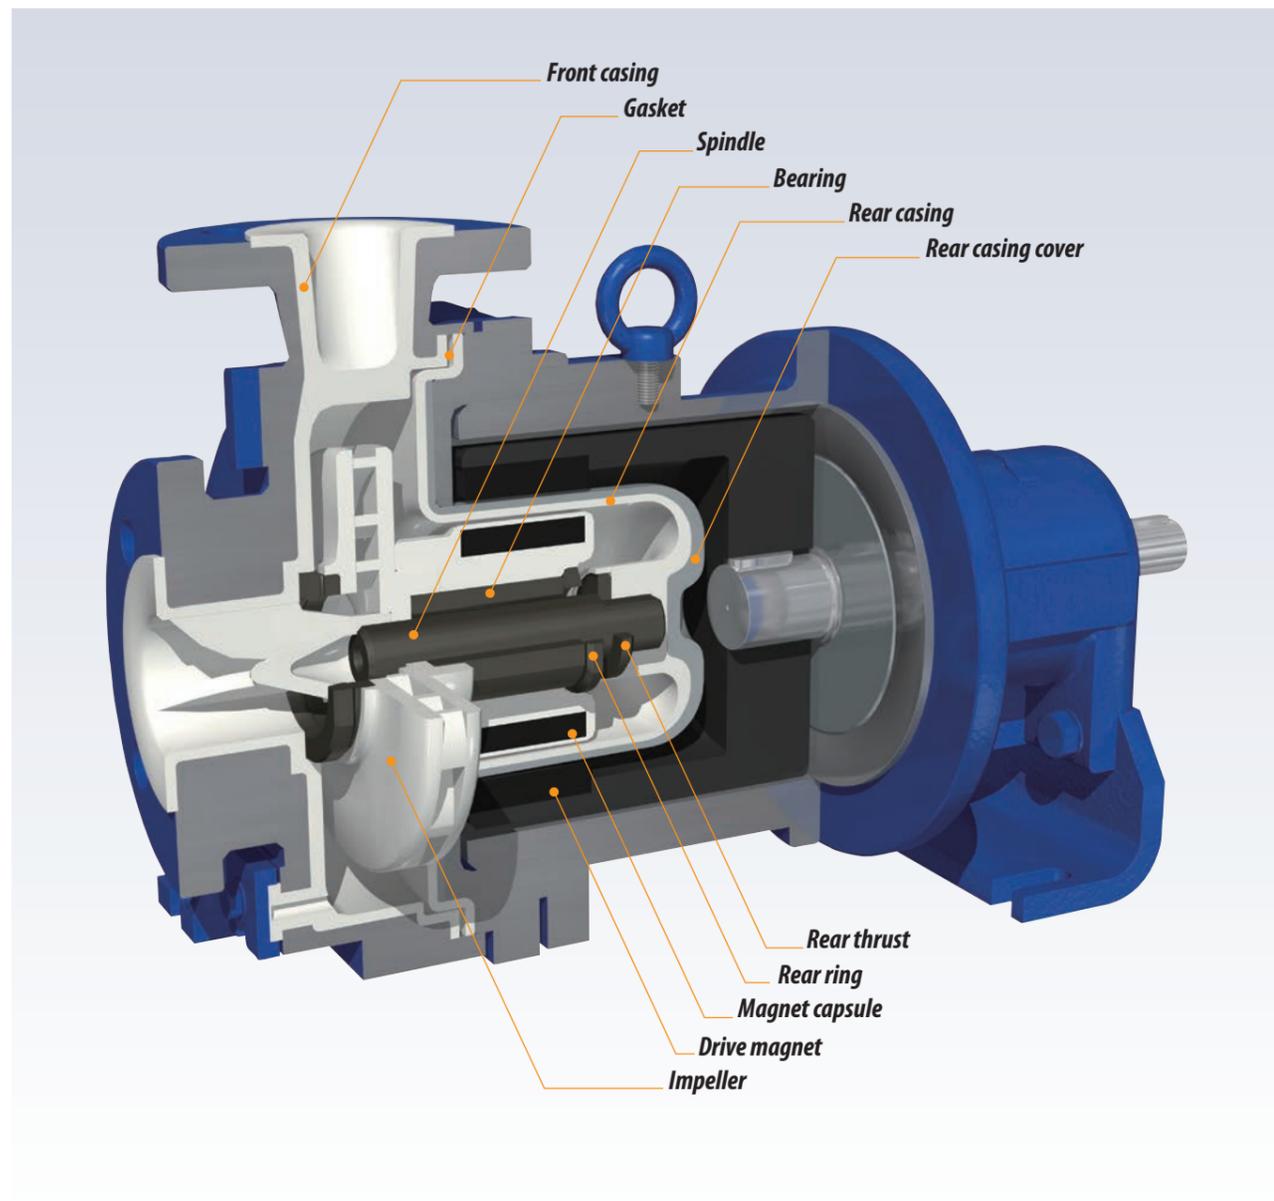

### Front casing

The ductile cast iron casing is a one-piece moulding with natural PFA fluoro-resin lining integrally moulded. This construction is free from contamination and ideal for transfer of clean liquids or with less particle generation.



### Impeller

Closed type impellers are designed to give high efficiency. To ensure positive fixing of impeller to magnet capsule a spline system together with a pin fixing is employed. This prevents the impeller from moving axially off the magnet capsule (PAT.). MDM50-32-200 models now have impellers capable of reaching max. heads of 74 meters (50Hz) to widen the range of application.



### Rear casing Rear casing cover

The fluoro-resin rear casing is strengthened by the outer rear casing cover which is manufactured in fibre reinforced plastic capable of withstanding a pressure of 1.6 MPa. This structure also eliminates any eddy current losses due to a rotating magnetic field. It also prevents sparks from being produced should the rear casing come into contact with the drive magnet unit. A newly developed triple-layer casing (PAT.) is used for the high head models all long coupling type when liquid temperature exceeds 80°C. Since the front and rear casing are bolted together from the front casing side liquid does not leak out when the foot support (bracket) is pulled back.



Rear casing with rear casing cover

### Rear ring

As a precaution against abnormal running, for example cavitation or air entering the pump where the magnet capsule could move axially backwards a rear ring and thrust ring have been incorporated. The rear ring is designed to give minimal heat generation from contact and therefore heat generation is greatly reduced compared to conventional designs. This prevents surrounding fluoro-resin from melting. (PAT.)

### Rear Thrust

The rear thrust withstands axial loads encountered from abnormal operation, it also minimizes heat generation.

### Magnet capsule

High magnet strength rare earth magnets are totally encapsulated with fluoro-resin mouldings. Magnets are small and lightweight which increases the efficiency of the pump. Taking advantage of the high magnetic strength its new design of "Non contact system"(PAT.) was developed to protect pump from abnormal condition.



### Spindle

Both ends of the spindle are supported by the front casing and the rear casing (the fixed spindle type). Material is SiC.



### Bearing

SiC gives high resistance to abrasion. Bearings can be individually replaced.




### Gasket

A PTFE shrouded gasket is used to enhance sealing performance and corrosion resistance.

### Wet-end materials

1	Front casing	PFA
2	Rear casing (Note 1)	
3	Impeller	
4	Magnet capsule	SiC
5	Bearing	
6	Spindle	
7	Liner ring	
8	Mouth ring	
9	Rear ring	PTFE
10	Rear thrust	
11	Gasket	

Note 1: Rear casing of MDM50-32-200 for over 80°C application is special construction (PAT.).

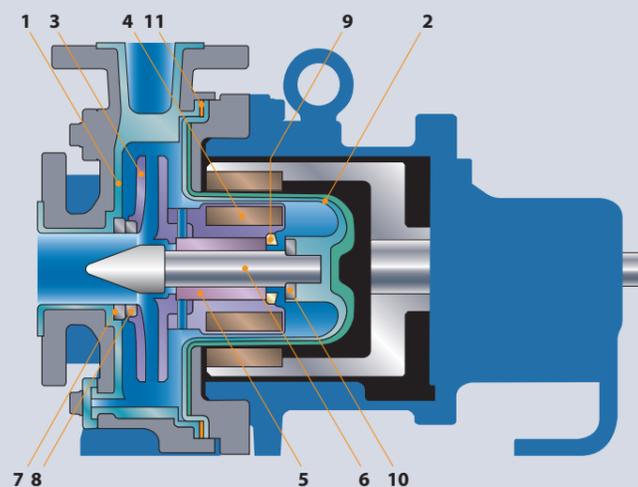

## Specifications

### 2 pole motor type

Model	Pump size Suction X Discharge	Impeller diameter	Capacity L/min	Head m	Motor kW
<b>MDM50-32-160</b>	50mm X 32mm	165	208	35.0	4.0, 5.5 or 7.5
		160		34.5 <small>Note1</small>	
		150		28.5	
		140		25.0	
		130		20.5	
		120		17.0	
<b>MDM50-32-200</b>	50mm X 32mm	225	208	70.0	5.5, 7.5, 11 or 15
		220		67.5	
		210		60.0	
		200		54.0	
		190		47.0	
		180		41.5	
<b>MDM65-40-160</b>	65mm X 40mm	165	417	33.0	4.0, 5.5 or 7.5
		160		32.5 <small>Note2</small>	
		150		27.0	
		140		22.5	
		130		18.0	
		120		15.0	
<b>MDM80-50-160</b>	80mm X 50mm	165	833	38.5	5.5, 7.5, 11, 15
		160		35.5	
		150		31.0	
		140		26.5	
		130		22.0	
		120		17.5	
		110		13.5	

Note1: For long coupling type, head is 34.5m.  
 Note2: For long coupling type, head is 32.5m.

### 4 pole motor type


Model	Pump size Suction X Discharge	Impeller dia.	Capacity L/min	Head m	Motor kW
<b>MDM50-32-160</b>	50 mm X 32 mm	170	200	7.5	1.5, 2.2, 4.0
<b>MDM50-32-200</b>	50 mm X 32 mm	225	200	15.0	1.5, 2.2, 4.0, 5.5
<b>MDM65-40-160</b>	65 mm X 40 mm	170	300	7.0	1.5, 2.2, 4.0
<b>MDM80-50-160</b>	80 mm X 50 mm	170	500	8.0	1.5, 2.2, 4.0, 5.5

### Common Specifications


• Temperature range of liquid handled	-20 to 150°C <small>Note1</small>	• Allowable maximum pressure	1.6 MPa
• Allowable slurry (KK type only)	Please contact us.	• Standard color of paint	Ultra marine blue RAL5002

Note1: Please contact us when handling liquid temperature is outside range of 0°C to 120°C.  
 Should your requirement be beyond the specs. shown in this catalog, please contact your nearest Iwaki distributor.


## Pump identification

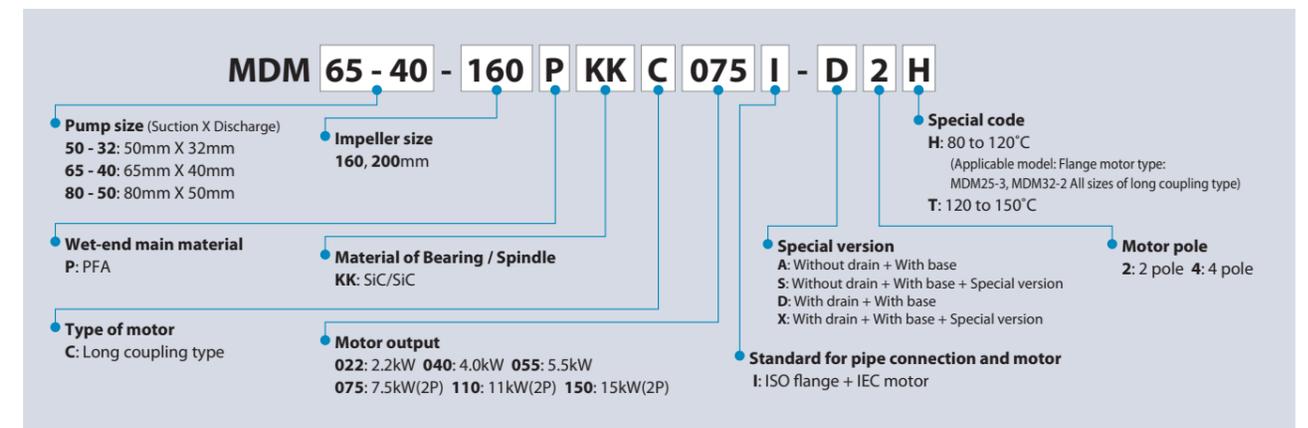

## Performance curves

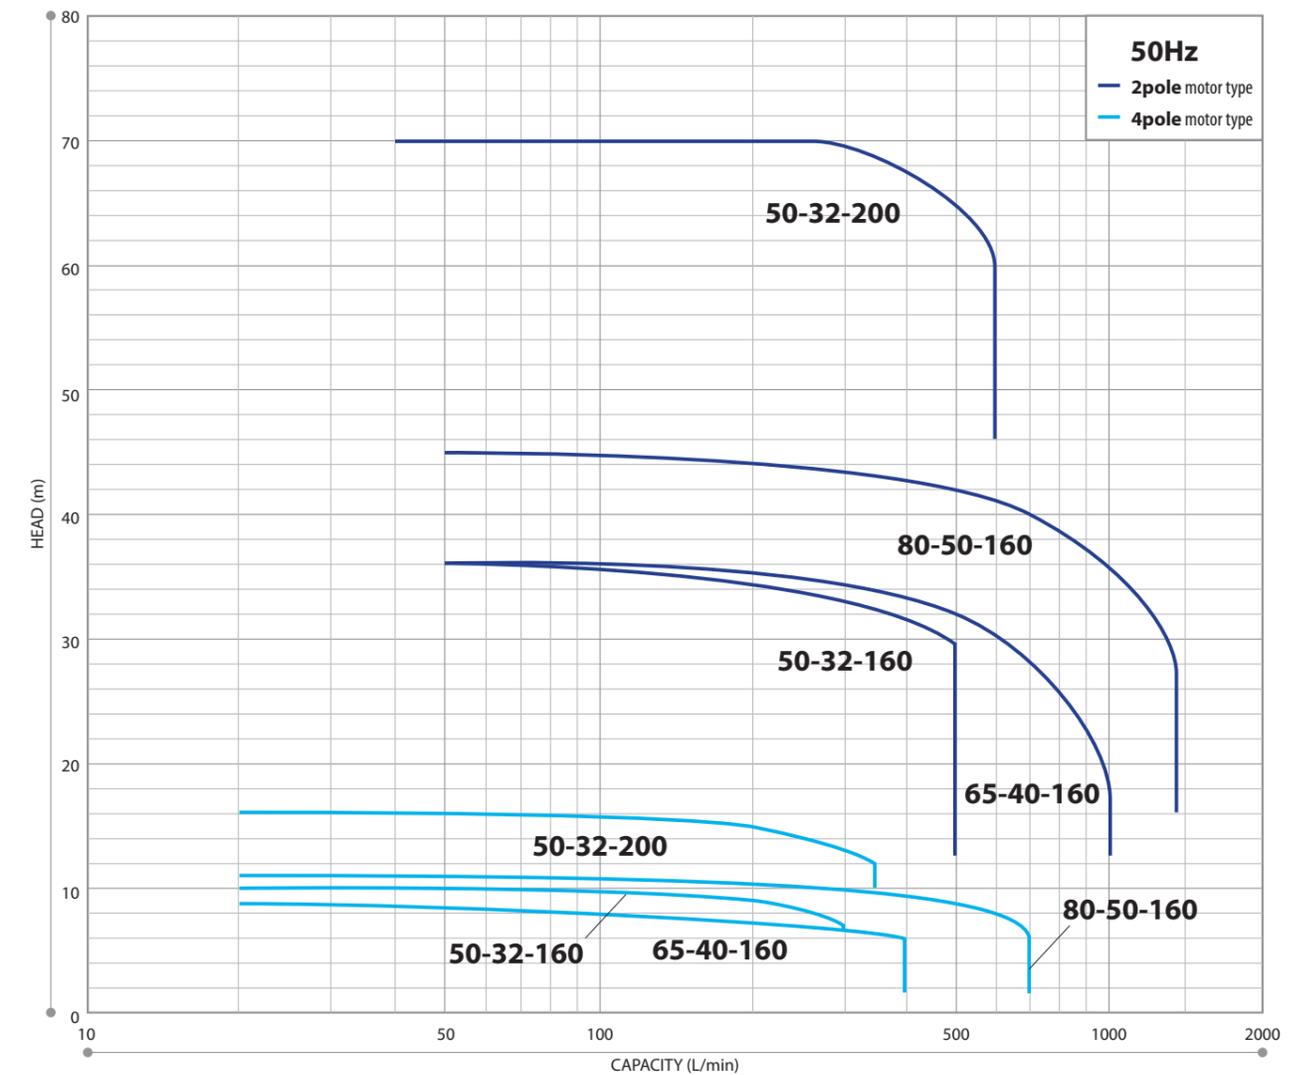

# Dimensions

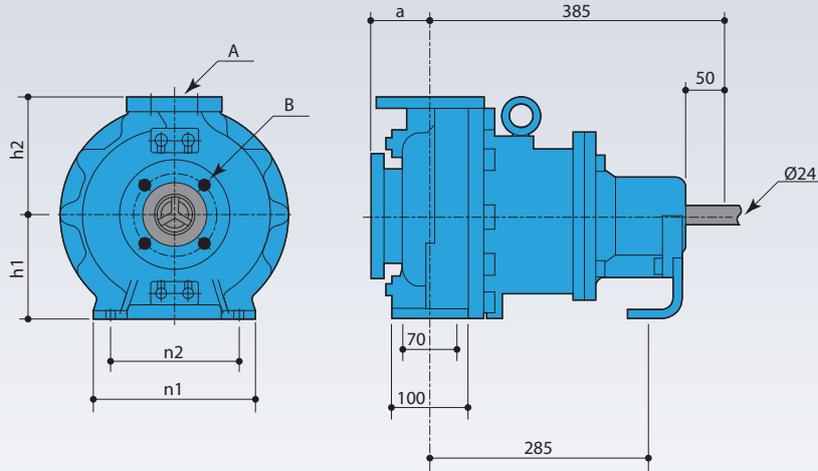

Model	a	h1	h2	n1	n2	A	B	Mass kg Less motor
<b>MDM50-32-160</b>	80	132	160	240	190	32	50	70
<b>MDM50-32-200</b>		160	180					80
<b>MDM65-40-160</b>	100	132	160	265	212	40	65	70
<b>MDM80-50-160</b>		160	180					80

in mm

## Iwaki dry running protector DR series (Option)

Model DR is electric current sensing type dry running protector. It detects the decreased load current (lower limit) to stop the pump when it runs dry or runs with air sucking in. It can detect over-load, too.



DR-20

### Specification

Model	<b>DR-20</b>	
Motor power	380 to 440V	
Applied motor	0.75 to 15kW	
Power	V	200 to 240V 10% shingle phase
45-65Hz	Input	3.5W
Detective current	0.5 to 32.0A	
Current transformar(CT)	Built-in	
Current range	Auto	4.4/17.6/32A
	Manual	2.2/4.4/8.8/11/17.6/26.4/32A
Ambient	Temperature:0 to 40°C Humidity:RH40 to 85%	
Outer dimension in mm	D80 X W153 X H110	

- Current figure to be set is indicated on LCD.
- Both top/bottom figures can be set.  
Top:Over-load  
Bottom:Dry running, air sucking-in operation, operation with suction side closed
- Built-in current transformer
- DIN rail mounting

**IWAKI CO., LTD.** 6-6 Kanda-Sudacho 2-chome Chiyoda-ku Tokyo 101-8558 Japan TEL : (81)3 3254 2935 FAX : 3 3252 8892 IWAKI has global net work. [www.iwakupumps.jp](http://www.iwakupumps.jp) Please find your distributor location at

European office : **IWAKI Europe GmbH**  
 Germany : **IWAKI Europe GmbH**  
 Holland : **IWAKI Europe GmbH** (Netherlands Branch)  
 Italy : **IWAKI Europe GmbH** (Italy Branch)  
 Spain : **IWAKI Europe GmbH** (Spain Branch)  
 Belgium : **IWAKI Belgium N.V.**  
 Denmark : **IWAKI Nordic A/S**  
 Finland : **IWAKI Suomi Oy**  
 France : **IWAKI France S.A.**  
 Norway : **IWAKI Norge AS**  
 Sweden : **IWAKI Sverige AB**  
 U.K. : **IWAKI Pumps (UK) Ltd.**

TEL: (49)2154 9254 0 FAX: 2154 9254 48  
 TEL: (49)2154 9254 50 FAX: 2154 9254 55  
 TEL: (31)74 2420011 FAX: (49)2154 925448  
 TEL: (39)0444 371115 FAX: 0444 335350  
 TEL: (34)93 37 70 198 FAX: 93 47 40 991  
 TEL: (32)13 67 02 00 FAX: 13 67 20 30  
 TEL: (45)48 24 2345 FAX: 48 24 2346  
 TEL: (358)9 2745810 FAX: 9 2742715  
 TEL: (33)1 69 63 33 70 FAX: 1 64 49 92 73  
 TEL: (47)23 38 49 00 FAX: 23 38 49 01  
 TEL: (46)8 511 72900 FAX: 8 511 72922  
 TEL: (44)1743 231363 FAX: 1743 366507

U.S.A. : **IWAKI America Inc.**  
 Argentina : **IWAKI America Inc.** (Argentina Branch)  
 Singapore : **IWAKI Singapore Pte Ltd.**  
 Indonesia : **IWAKI Singapore** (Indonesia Branch)  
 Malaysia : **IWAKIm Sdn. Bhd.**  
 Australia : **IWAKI Pumps Australia Pty Ltd.**  
 Hong Kong : **IWAKI Pumps Co., Ltd.**  
 China : **GFTZ IWAKI Engineering & Trading Co., Ltd.**  
 : **IWAKI Pumps (Shanghai) Co., Ltd.**  
 Korea : **IWAKI Korea Co.,Ltd.**  
 Taiwan : **IWAKI Pumps Taiwan Co., Ltd.**  
 Thailand : **IWAKI (Thailand) Co.,Ltd.**  
 Vietnam : **IWAKI Pumps Vietnam Co., Ltd.**

TEL: (1)508 429 1440 FAX: 508 429 1386  
 TEL: (54)11 4745 4116  
 TEL: (65)6316 2028 FAX: 6316 3221  
 TEL: (62)21 6906606 FAX: 21 6906612  
 TEL: (60)3 7803 8807 FAX: 3 7803 4800  
 TEL: (61)2 9899 2411 FAX: 2 9899 2421  
 TEL: (852)2607 1168 FAX: 2607 1000  
 TEL: (86)20 84350603 FAX: 20 84359181  
 TEL: (86)21 6272 7502 FAX: 21 6272 6929  
 TEL: (82)2 2630 4800 FAX: 2 2630 4801  
 TEL: (886)2 8227 6900 FAX: 2 8227 6818  
 TEL: (66)2 322 2471 FAX: 2 322 2477  
 TEL: (84)613 933456 FAX: 613 933399

**Caution for safety use:**  
 Before use of pump, read instruction manual carefully to use the product correctly.

**Legal attention related to export.**

Our products and/or parts of products fall in the category of goods contained in control list of international regime for export control. Please be reminded that export license could be required when products are exported due to export control regulations of countries.

The posting and copying from this catalogue without permission is not accepted firmly.